



TENT WASH (SPRAY ON)

Cleaner for tents, covers and outdoor equipment. Concentrated and ready to use.

Restores the water-repellent effect, removes dirt, tree sap and bird chalk, extends the life span of the item.

How to use:



Shake the bottle and moisten the material



Spray from a distance of 10 to 15 cm



Use a non-scratchy STORM sponge for cleaning. Before repackaging, make sure the material is completely dry

This spray cleaner offers direct cleaning to maintain the outer tent's original properties and performance without damaging the DWR treatment. Great for small tents and covers, For larger items try our regular cleaner, which is applied diluted with a sponge. Make sure to rinse off the material after cleaning before using the impregnation.



restores
water repellency



restores
breathability



Increases
garment
life span



gentle
to fabrics

ADDITIONAL INFORMATION

- Available in 150 ml
- **EAN-Code:** 5034886511096