NON SCRATCH SPONGE

Our scratch-free sponge with a green surface will not damage fabrics or scratch varnish when used wet.

Removes dirt, tree sap and bird calk, extends the life span of the item.

How to use:

Vanishees are not scratched or damaged Moisten the sponge with water Use the colored side to detach dirt and use the other side of the sponge to wipe it clean

The unique design of our sponge offers two types of cleaning. The gray side of the sponge sticks to dirt and removes it from the surface with ease. The green, rough surface provides an extra boost for cleaning hard-to-remove stains. Even if it is used wet, it will not scratch the most delicate surfaces such as leather and fabric. The ideal partner for the best possible aftercare of the equipment.



ADDITIONAL INFORMATION

• One size only

• EAN-Code: 5034886431028

TENT CARE | Non Scratch Sponge

